

How to add Heat Pump Akvaterm Geo 5xx?

Add your Akvaterm Geo 5xx heat pump to the
Reduxi Controller.

🔧 Akvaterm Geo 5xx · Reduxi Controller

📖 Modbus unit ID: normally 1





Akvaterm Akva Geo

IN THIS ARTICLE

1. Technical documentation
2. Required equipment
3. Connect and configure the heat pump
4. Log in to the Reduxi web interface
 - Via the Reduxi app
 - Via a web browser
5. Add the heat pump to Reduxi
 - Basic settings
 - Communication settings
 - Advanced settings
 - Test communication
6. Check the readings
7. Summary
8. Common issues
9. Related articles

1 Technical documentation

Akvaterm publishes the guides for the Akva Geo on its product page, under Guides.

- [Akvaterm Akva Geo: guides](#) – Instructions on how to connect and configure the device (manufacturer web page)
- [Akvaterm brochure \(EN\)](#) – Product brochure, PDF
- [Manual \(FIN, SVE, ENG\)](#) – Manual, PDF

2 Required equipment

You need these components:

- ☐ Reduxi Controller
- ☐ Laptop or tablet with internet access to configure the device in Reduxi

3 Connect and configure the heat pump

Connect and configure the Akvaterm Geo 5xx as described on the manufacturer web page. See [Point 1](#).

4 Log in to the Reduxi web interface

You can open the Reduxi web interface in two ways:



Reduxi app

Via tunnel connection · works from anywhere

REMOTE



Web browser

In the local network · via IP address or reduxि.local

4.1 Via the Reduxi app

1 Open the app and log in

Launch the Reduxi app on your smartphone or tablet and log in with your credentials.

2 Open Reduxi devices

 
Tap the menu icon (three lines, top left) and select **Reduxi devices**.

3 Activate the tunnel connection


Switch on the tunnel connection and wait a moment until it is active.

4 Open the configurator

Tap **Open configurator**. The Reduxi web interface opens.

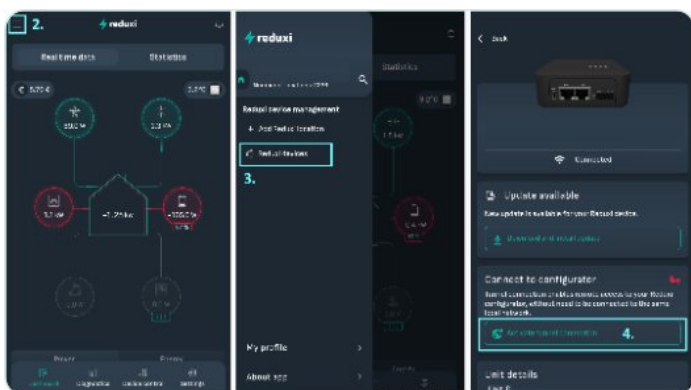

Activate the tunnel connection (step 3)

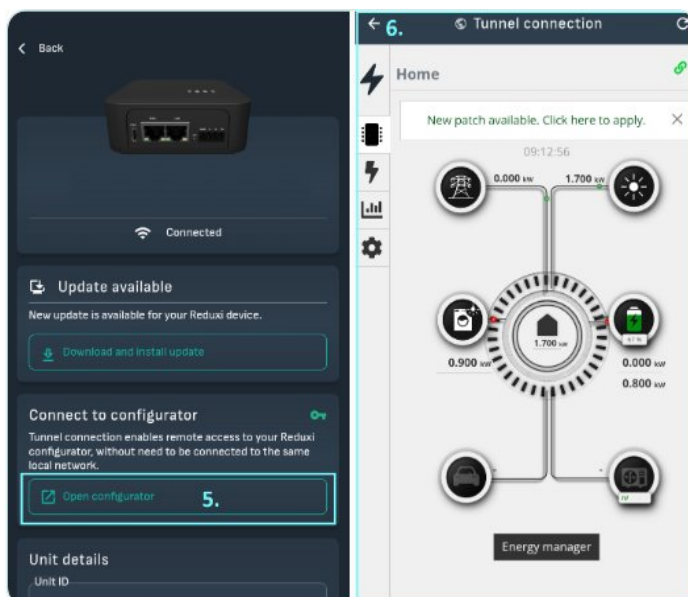 

Open configurator (step 4)

 
4.2 Via a web browser

1 Open the login page


On a device in the same network, open a web browser and enter the controller's IP address or `http://reduxi.local`. You can find the controller's IP address in your router's device list or in the Reduxi app under **Reduxi devices**.

2 Log in

Username: `admin` · Password: `admin` (factory default)

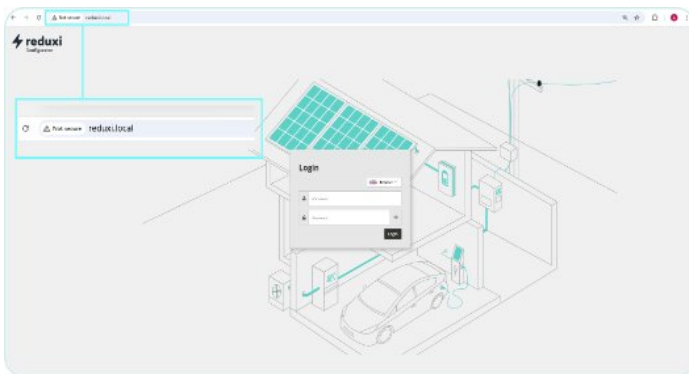

Reduxi Controller login screen

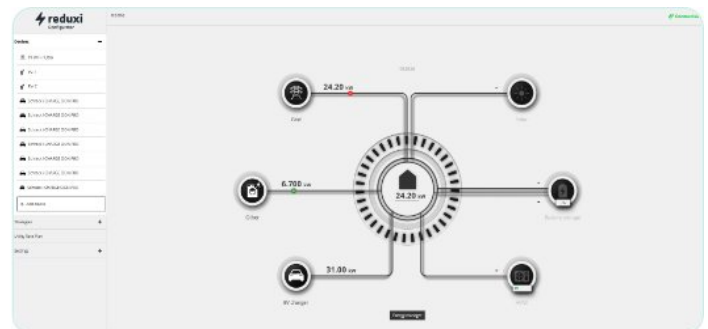 

Controller web interface after login

5 Add the heat pump to Reduxi

Use these steps to add a new heat pump or to edit an existing one.

5.1 Basic settings

Log in locally to the [Reduxi Configurator](#) on the controller (see [Point 4](#)) and click **+ Add device**.

Enter the basic settings of the device: device type, type and a name of your choice, for example **Akvaterm Geo 5xx**.

5.2 Communication settings

Select the communication channel and enter the device configuration:


PARAMETER	VALUE
Communication channel	Select the channel the heat pump is connected to
Modbus unit ID	Normally 1

5.3 Advanced settings

Enter and choose the advanced settings.

5.4 Test communication

 Click **Test communication** at the bottom of the wizard. It reads the Akvaterm Geo 5xx once and saves nothing. If the test succeeds, click **Done**: only **Done** creates the device.



The **Test communication** button



The **Done** button

6 Check the readings

6.1 Last measurements

After communication is established, check the values under **Devices – Akvaterm Geo 5xx** in the Reduxi Configurator as an additional test.

6.2 Enable control by Reduxi

For advanced control, integrate the device into the Reduxi strategy. Under **Devices – Akvaterm Geo 5xx** in the Reduxi Configurator, set the **control type** to **AUTO**. Only then do strategy commands affect the device.

To achieve maximum flexibility and energy cost reduction with dynamic prices and dynamic tariffs, define a strategy as described in [Strategies for Reduxi controller](#).

✓ Summary

Preparation (Points 1–2): Open the Akvaterm guides. Prepare the controller and a laptop or tablet.

Akvaterm Geo 5xx (Point 3): Connect and configure the heat pump as described by Akvaterm.

Add to Reduxi (Points 4–5): Log in to the Reduxi web interface. Click + Add device, enter the basic settings, the communication channel, the Modbus unit ID and the advanced settings. Run Test communication and click Done.

Go live (Point 6): Check the readings under Devices and set the control type to AUTO.

→ Common issues

ISSUE	SOLUTION
Test communication fails	Check the Modbus unit ID. Normally 1 is used.
Open configurator does not open or stays empty	The tunnel is not active yet. Wait about 30 seconds and check that the controller is online.
Login with admin is rejected	The password was changed during installation. Ask the installer. The Reduxi account password does not work here.
reduxi.local does not load	Your device is not in the same network as the controller. Use the IP address or the tunnel connection.
Communication test fails, device shows offline	Check reachability, IP address / port / unit ID, and that the protocol is enabled on the device.

→ Related articles

Matching guides from the Reduxi knowledge base:



Akvaterm Akva Geo

Product page with guides and documents from the manufacturer



Device setup guides

All step-by-step guides for connecting devices to the Reduxi Controller



List of supported devices

All devices that work with the Reduxi Controller



Strategies for the Reduxi Controller

Energy manager and other strategies explained