

How to add energy meter Algodue UPM209?

Connect your Algodue UPM209 three-phase network analyzer to the Reduxi Controller.

🔌 Algodue UPM209 · Reduxi Controller

🌐 Modbus RTU/ASCII (RS485) or Modbus TCP (Ethernet)

📄 Modbus unit ID: normally 1

algodue
SOCOME Group



Algodue UPM209

IN THIS ARTICLE

1. Technical documentation
2. Required equipment
3. Connect and configure the meter
 - Communication port
 - Modbus unit ID
4. Log in to the Reduxi web interface
 - Via the Reduxi app
 - Via a web browser
5. Add the meter to Reduxi
 - Basic settings
 - Communication settings
 - Test communication
6. Check the readings
7. Summary
8. Common issues
9. Related articles

1 Technical documentation

Manufacturer documents for the Algodue UPM209:

- [Algodue UPM209 product page](#) – Technical specifications and contact for further configurations.
- [UPM209 datasheet \(PDF\)](#) – Specifications, versions and order codes.
- [WintoolNET software](#) – Configuration software for the UPM209 and UPM309.

2 Required equipment

- ☐ Algodue UPM209 three-phase network analyzer, installed by a qualified electrician
- ☐ Cable for the communication port of the meter: RS485 or Ethernet (RJ45), depending on the model
- ☐ Reduxi Controller
- ☐ Laptop or tablet with internet access to configure the device in Reduxi

3 Connect and configure the meter

Find the instructions to connect and configure the meter on the manufacturer page: [Algodue UPM209](#).

3.1 Communication port

The UPM209 has one of two communication ports, depending on the model:

PORT	PROTOCOL	DETAILS
RS485 (optoisolated)	Modbus RTU/ASCII	300 to 57600 bps
Ethernet (RJ45)	Modbus TCP	10/100 Mbps; also HTTP, NTP and DHCP

3.2 Modbus unit ID

You need the Modbus unit ID of the meter in the Reduxi Configurator. Normally, **1** is used.

4 Log in to the Reduxi web interface

You can open the Reduxi web interface in two ways:



Reduxi app

Via tunnel connection · works from anywhere

REMOTE



Web browser

In the local network · via IP address or `reduxi.local`

4.1 Via the Reduxi app

1

Open the app and log in

Launch the Reduxi app on your smartphone or tablet and log in with your credentials.

2

Open Reduxi devices

Tap the menu icon (three lines, top left) and select **Reduxi devices**.

3


Activate the tunnel connection

Switch on the tunnel connection and wait a moment until it is active.

4

Open the configurator

Tap **Open configurator**. The Reduxi web interface opens.

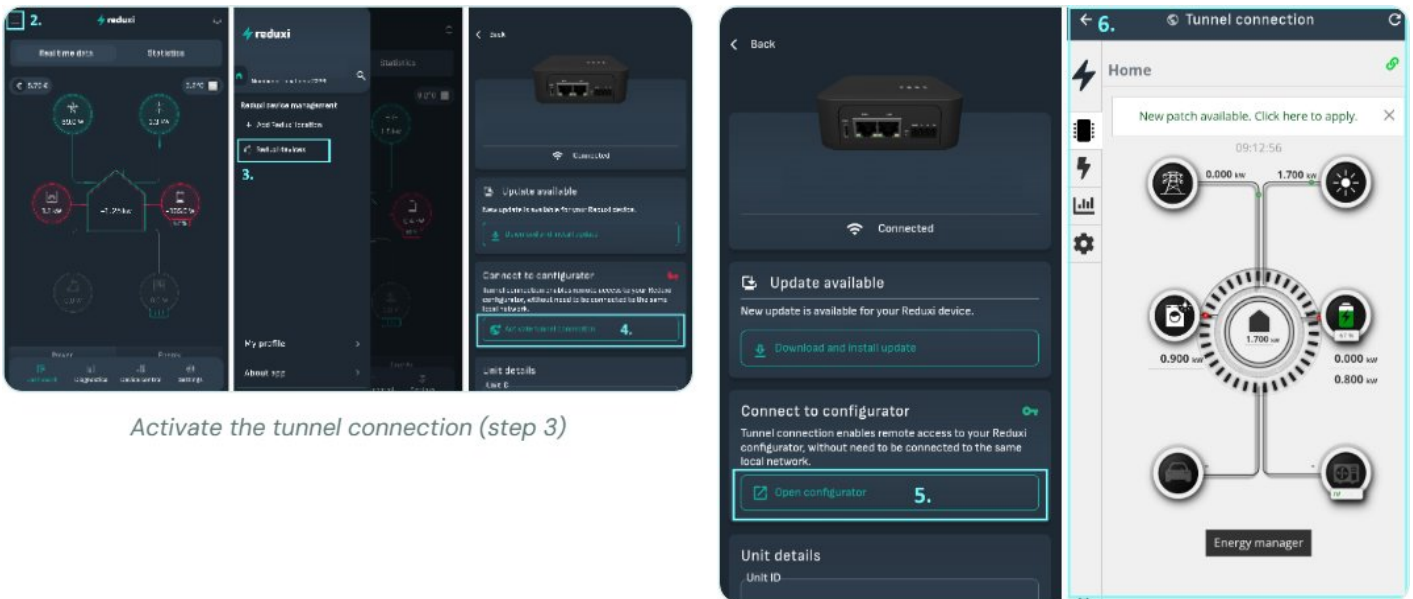

Activate the tunnel connection (step 3)

Open configurator (step 4)

4.2 Via a web browser

1


Open the login page

On a device in the same network, open a web browser and enter the controller's IP address or **<http://reduxi.local>**. You can find the controller's IP address in your router's device list or in the Reduxi app under **Reduxi devices**.


2

Log in

Username: **admin** · Password: **admin** (factory default)

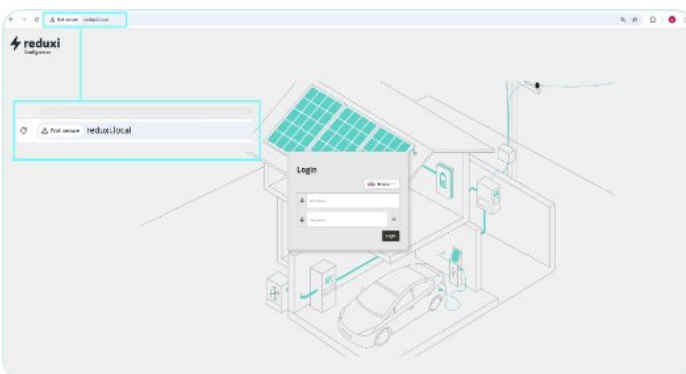

Reduxi Controller login screen

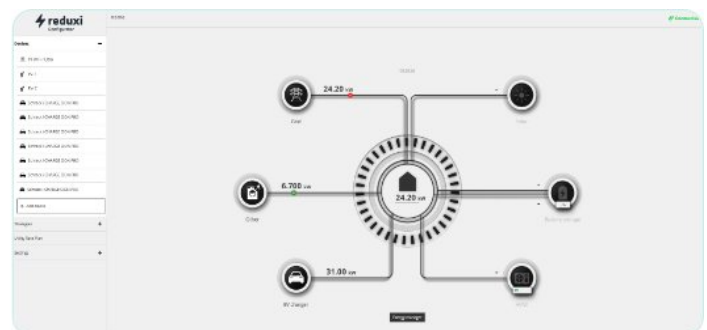

Controller web interface after login

5 Add the meter to Reduxi

Use these steps to add a new meter or to edit an existing one.



Read only

In the [List of supported devices](#), the Algodue UPM209 is listed with the protocol Modbus and with read access.

5.1 Basic settings

Log in to the [Reduxi Configurator via the browser](#) (see [Point 4](#)) and click **Add device**.

In the first step, enter the basic settings of the device. Then click **Next**.

5.2 Communication settings


Select the communication channel that matches the port of your meter. Then enter the device configuration:

PARAMETER	VALUE
Modbus unit ID	Normally 1

Then enter and choose the advanced settings.

5.3 Test communication

 Click **Test communication** at the bottom of the wizard. It reads the Algodue UPM209 once and saves nothing. If the test succeeds, click **Done**: only **Done** creates the device.



The **Test communication** button



The **Done** button

6 Check the readings

6.1 Last measurements

After communication is established, check the values under **Devices** in the Reduxi Configurator. Reduxi only reads the meter.

✓ Summary

Preparation (Points 1–2): Read the Algodue documents and prepare the equipment.

Algodue UPM209 (Point 3): Connect the meter through its RS485 or Ethernet port. Note the Modbus unit ID.

Add to Reduxi (Points 4–5): Log in to the Reduxi Configurator, add the meter with its Modbus unit ID and test the communication.

Go live (Point 6): Check the readings. Reduxi reads the meter.

→ Common issues

ISSUE	SOLUTION
Test communication fails	Check that the Modbus unit ID in Reduxi equals the unit ID of the meter. Normally it is 1.
The meter does not respond	Select the communication channel that matches the port of your meter: RS485 (Modbus RTU/ASCII) or Ethernet (Modbus TCP).
Open configurator does not open or stays empty	The tunnel is not active yet. Wait about 30 seconds and check that the controller is online.
Login with <code>admin</code> is rejected	The password was changed during installation. Ask the installer. The Reduxi account password does not work here.
<code>reduxi.local</code> does not load	Your device is not in the same network as the controller. Use the IP address or the tunnel connection.
Communication test fails, device shows offline	Check reachability, IP address / port / unit ID, and that the protocol is enabled on the device.

→ Related articles

Matching guides from the Reduxi knowledge base:



Algodue UPM209 product page

Manufacturer page with technical specifications.



Device setup guides

All step-by-step guides for connecting devices to the Reduxi Controller



List of supported devices

All devices that work with the Reduxi Controller



Strategies for the Reduxi Controller

Energy manager and other strategies explained