

How to add Solar Power Plant Tesla Backup Gateway?

Add a Tesla Backup Gateway solar power plant to the Reduxi Controller and read its values in the Reduxi Configurator.

🔑 Tesla Backup Gateway · Reduxi Controller

🔑 Login with username and password

💻 Reduxi Configurator



📄 IN THIS ARTICLE

1. Technical documentation
2. Required equipment
3. Log in to the Reduxi web interface
 - Via the Reduxi app
 - Via a web browser
4. Add the solar power plant to Reduxi
 - Basic settings
 - Communication settings
 - Test communication
5. Check the readings
6. Summary
7. Common issues
8. Related articles

1 Technical documentation

Find the instructions to connect and configure the gateway on the Tesla support pages:

- [Tesla Energy support](#) – Manufacturer instructions
- [Backup Gateway 2: technical specifications \(PDF\)](#) – Datasheet: communication interfaces Ethernet, Wi-Fi and cellular (secondary)

2 Required equipment

You need:

- ☐ Reduxi Controller
- ☐ Tesla Backup Gateway, connected and configured as described in the manufacturer instructions (see [Point 1](#))
- ☐ Username and password for the gateway
- ☐ Laptop or tablet with internet access to configure the device in Reduxi

3 Log in to the Reduxi web interface

You can open the Reduxi web interface in two ways:



REMOTE

Reduxi app

Via tunnel connection · works from anywhere



Web browser

In the local network · via IP address or `reduxi.local`



3.1 Via the Reduxi app

1

Open the app and log in

Launch the Reduxi app on your smartphone or tablet and log in with your credentials.

2

Open Reduxi devices

Tap the menu icon (three lines, top left) and select **Reduxi devices**.

3


Activate the tunnel connection

Switch on the tunnel connection and wait a moment until it is active.


4

Open the configurator

Tap **Open configurator**. The Reduxi web interface opens.

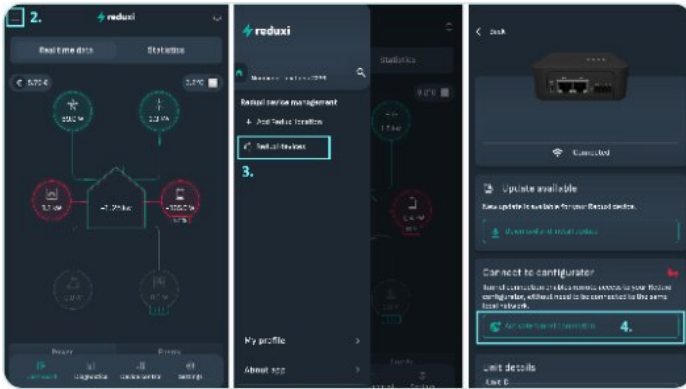

Activate the tunnel connection (step 3)

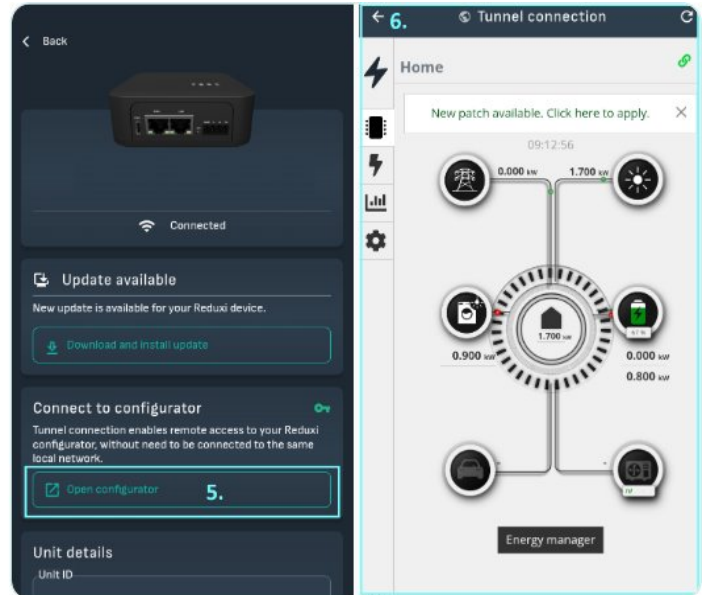

Open configurator (step 4)


3.2 Via a web browser

1 Open the login page


On a device in the same network, open a web browser and enter the controller's IP address or `http://reduxi.local`. You can find the controller's IP address in your router's device list or in the Reduxi app under **Reduxi devices**.

2 Log in

Username: `admin` · Password: `admin` (factory default)

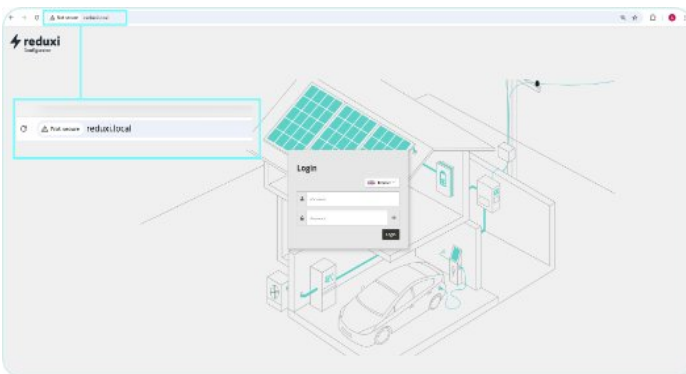

Reduxi Controller login screen

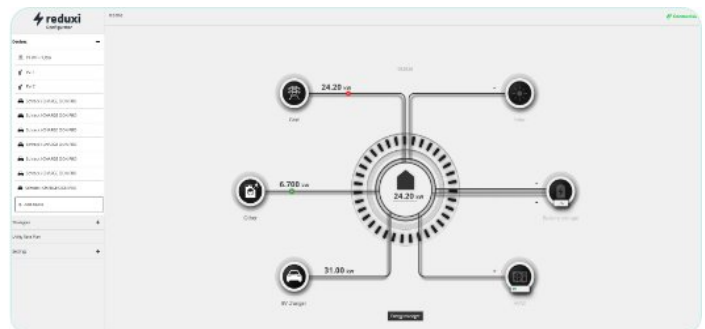

Controller web interface after login

4 Add the solar power plant to Reduxi

Use these steps to add a new device or to edit an existing one.

4.1 Basic settings

Log in to the [Reduxi Configurator](#) (see [Point 3](#)), click **+ Add device** and enter the basic settings of the device.

 
4.2 Communication settings

Select the communication channel and enter the device configuration: **username** and **password**. For more information, read [How to add Battery Tesla Backup Gateway](#).

Then enter and choose the advanced settings.

4.3 Test communication

Click **Test communication** at the bottom of the wizard. It reads the Tesla Backup Gateway once and saves nothing. If the test succeeds, click **Done**: only **Done** creates the device.



The *Test communication* button



The *Done* button

5 Check the readings

5.1 Last measurements

After communication is established, check the values under **Devices** in the Reduxi Configurator as an additional test.

5.2 Strategies

To reduce energy costs with dynamic prices and dynamic tariffs, define a strategy as described in [Strategies for Reduxi controller](#).

✓ Summary

Preparation (Points 1–2): Open the Tesla instructions. Connect and configure the gateway. Prepare the Reduxi Controller, the username and password and a laptop or tablet.

Log in (Point 3): Log in to the Reduxi web interface of the controller.

Add to Reduxi (Point 4): Click + Add device, enter the basic settings, select the communication channel, enter username and password and the advanced settings. Test the communication and press Done.

Go live (Point 5): Check the last measurements and define a strategy.

→ Common issues

ISSUE	SOLUTION
Username or password not accepted	Check the credentials of the gateway. See the guide on the Tesla Backup Gateway battery for more information.
Open configurator does not open or stays empty	The tunnel is not active yet. Wait about 30 seconds and check that the controller is online.
Login with <code>admin</code> is rejected	The password was changed during installation. Ask the installer. The Reduxi account password does not work here.
<code>reduxi.local</code> does not load	Your device is not in the same network as the controller. Use the IP address or the tunnel connection.
Communication test fails, device shows offline	Check reachability, IP address / port / unit ID, and that the protocol is enabled on the device.

→ Related articles

Matching guides from the Reduxi knowledge base:



How to add Battery Tesla Backup Gateway

Reduxi guide for the Tesla Backup Gateway as a battery.



Device setup guides

All step-by-step guides for connecting devices to the Reduxi Controller



List of supported devices

All devices that work with the Reduxi Controller



Strategies for the Reduxi Controller

Energy manager and other strategies explained