


How to access Reduxi controller?

Original text as published before the redesign of this article. Wording unchanged.

Archived: 28 October 2026

It is similar to how we connect to an internet modem, which we all know. Let's go ahead and get started.

The first step is to obtain a connection to the local Reduxi controller through an IP connection in the local network. Reduxi controller has a default IP set to 10.100.100.50 or receives dynamic local IP through DHCP protocol. You can find Reduxi dynamic IP using [Advanced IP Scanner](#).

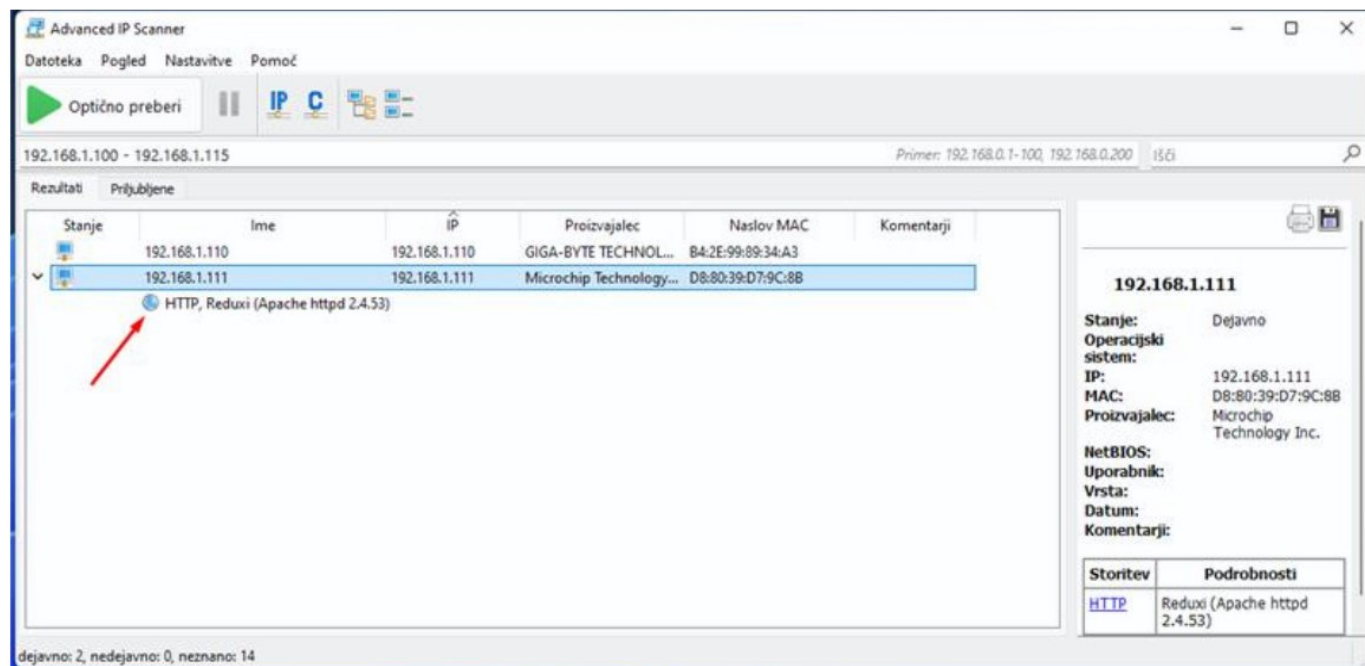

Reduxi device found using Advanced IP Scanner software.