

How to use factory-set IP address of the Reduxi controller?

Original text as published before the redesign of this article. Wording unchanged.


Archived: 28 October 2026

If you decided to use the factory-set IP address for the first time connecting the controller to the network, then you must first assign a static IP address to your computer.

The factory-set IP address of Reduxi controller:

- **10.100.100.50**

Set static IP address of your computer: 10.100.100.X (instead of X, enter any number from 2 to 253, e.g. 10.100.100.5 except 50 which is already assigned to the controller).

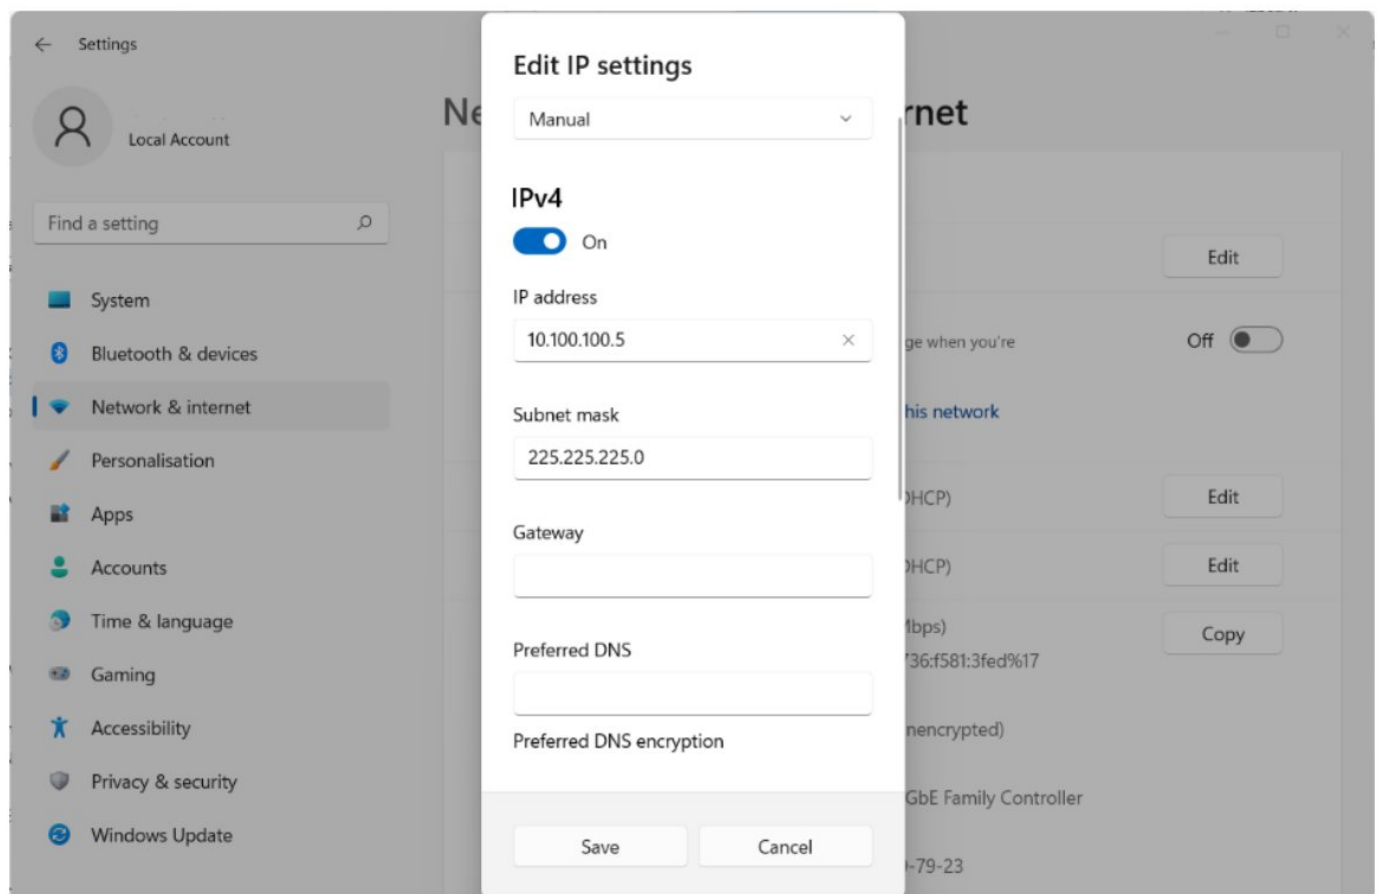

After you've successfully assigned a static IP address to your computer, enter the controller's factory-set IP address into your browser. The browser redirects you to Reduxi Configurator login page.

Note: The factory-set IP address serves a connection that is always available regardless of the settings of Reduxi controller.

[Next step is to log in to Reduxi Configurator via browser.](#)